

- PENDANTS: one
- MOUNTING: mini outie canopy 38mm (1.5") in diameter x 16mm (0.6") deep
- LAMPING: 1.5w LED or 10w xenon
- COAX: adjustable. 3000mm (10') standard / up to 30500mm (100') maximum
- MATERIALS: cast glass, blown borosilicate glass, braided metal coaxial cable, electrical components, white polyurethane canopy
- WEIGHT: approximately 2kg (4lb)
- POWER SUPPLIES: remote mounted (fixture does not hook directly to a junction box).

DESCRIPTION

The 'mo' designation in this 14 variant refers to the mini outie canopy. The mini outie canopy is 38mm (1.5") in diameter and 16mm (0.6") deep, which creates a subtle profile that will essentially disappear into the application surface. The pendant drop lengths on this light fixture are adjustable up to the specified maximum.

The 14 is an articulated, seamed cast glass sphere with a frosted cylindrical void that houses a low voltage lamp. Individual pendants are visually quite subtle, but gain tremendous strength when multiplied and clustered in large groups.

NOTES

- + Purchase replacement lamps online at www.bocci.com/shop/bulbs
- + Unless otherwise noted when ordering, all chandeliers will be outfitted to be xenon compatible.
- + Unless otherwise specified, a single class 2 power supply will be sent for every 5 xenon fixtures or every 12 LED fixtures
- + Requires power supplies to be remote mounted unless otherwise specified

US Patent # D556, 361
EU Patent # 000518394-0001

Made in Vancouver, Canada

Vancouver
sales@bosci.com
www.bosci.com

Berlin
europa@bosci.com
www.bosci.com

approx 2kg (4lb)




MINI OUTIE CANOPY

14.1mo

Design by Omer Arbel
PRODUCT SPECIFICATION

© 2020, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bosci.com

BOCCI

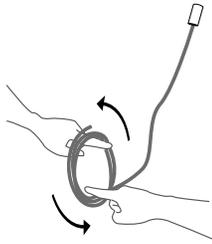

1

Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.


Use patience: allow the cable to uncoil completely to avoid kinks.



2

Drill a 9mm (0.35") diameter hole in ceiling material. Pull low voltage house wire through the hole.

Note: This low voltage wire will run to a remote mounted power supply.

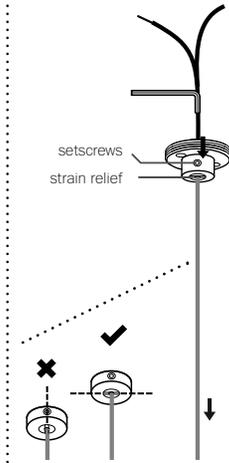


3

Determine the overall drop for the pendant fixture. Use the 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through the canopy until you have reached your desired drop length. Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

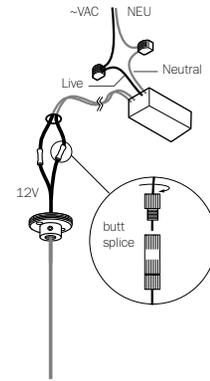

4


Xenon (110V) or LED: connect the black wire to black and white wire to white wire.

Xenon (230V): connect black wire to brown wire and white wire to blue wire.

Connect the house wires to the coaxial cable using #16 butt splices (stagger the splices). Use raw butt splices and heat shrink to simplify the installation.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Note: Insulated core is positive and braided exterior is negative.

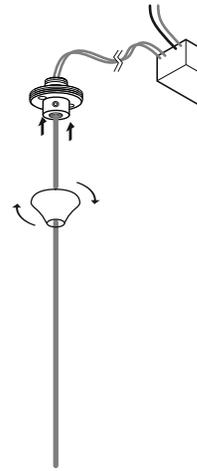


5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Affix mini-canopy to ceiling surface with fasteners provided. Twist the threaded outie cover into place.

Turn power to fixture on.

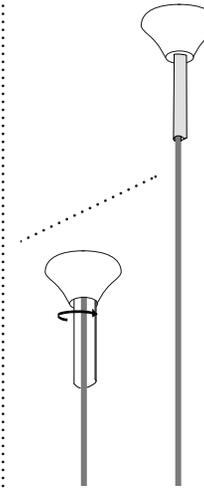


6

Use silicone caulk to fill the seam between the ceiling and the canopy.

Note: mask the coaxial cable off with painters tape to help with cleanup.

Paint over entire assembly.

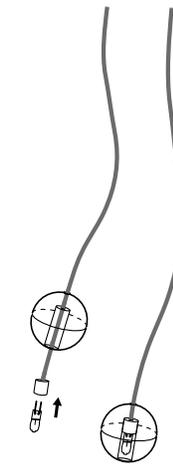

7

Bocci 10w xenon or 1.5w LED lamps included. Lamping is power supply specific.

Plug the lamp into the socket. Do not touch the lamp with your bare hands. Ensure power to lamp is working correctly.

Note: when using a dimmer use only low voltage electronic dimmer.

The borosilicate tube is an integral part to the structure of the pendant. Please contact for replacement if it is damaged at any point.



8

Remove masking tape and clean fingerprints from glass surfaces.

For additional assistance, please contact Bocci:

Vancouver
sales@bocci.com
www.bocci.com

Berlin
europe@bocci.com
www.bocci.com

US Patent # D556, 361 EU
Patent # 000518394-0001

Made in Vancouver, Canada



MINI OUTIE CANOPY

14.1mo

Design by Omer Arbel
PRODUCT INSTALLATION INSTRUCTIONS

© 2020, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

BOCCI