


32  
(1.3')

adjustable  
up to  
3000  
(10')  
standard

adjustable  
up to  
30500  
(100')  
custom



203 (8')

PENDANTS: seven

MOUNTING: brushed nickel canopy 203mm (8") in diameter x 32mm (1.3") deep

LAMPING: 1.5w LED or 20w xenon

COAX: adjustable. 3000mm (10') standard / up to 30500mm (100') maximum

MATERIALS: porcelain, borosilicate glass, braided metal coaxial cable, electrical components, brushed nickel canopy

WEIGHT: approximately 4.1kg (9lb)

POWER SUPPLIES: integral

#### DESCRIPTION

21.7 is a clustered configuration of seven 21 pendants hung from a round canopy. The pendants are designed to hang in a random configuration at times clustering and grouping together and others trailing off. The result is an ambient installation or field of light. The pendant drop lengths on this fixture are adjustable up to the specified maximum.

Inspired by the sporadic, discordant arrangement of barnacles on a rock surface, the 21 is fabricated from thin sheets of porcelain wrapped around a trumpet shaped borosilicate diffuser. Each diffuser houses a low voltage lamp. A strong contrast is established between the organically distributed soft light passing through the white porcelain skin and the sharp, crisp light passing through the borosilicate glass diffuser.

#### NOTES

- + Purchase replacement lamps online at [www.bocci.com/shop/bulbs](http://www.bocci.com/shop/bulbs)
- + Unless otherwise noted when ordering, all chandeliers will be outfitted to be xenon compatible.
- + As an alternative to a built-in power supply, Bocci recommends mounting power supplies remotely in an easily accessible and hidden location for ease of long-term maintenance.


US patent # US D556,361  
Worldwide patents issued and pending.

Made in Vancouver, Canada


Vancouver  
[sales@bocci.com](mailto:sales@bocci.com)  
[www.bocci.com](http://www.bocci.com)

Berlin  
[europa@bocci.com](mailto:europa@bocci.com)  
[www.bocci.com](http://www.bocci.com)

approx 4.1kg (9lb)




CLUSTER  
**21.7** Design by Omer Arbel  
PRODUCT SPECIFICATION

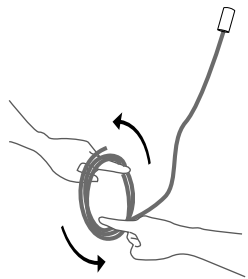

1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

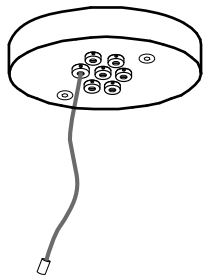

2

Determine the overall drop for the pendant fixture.

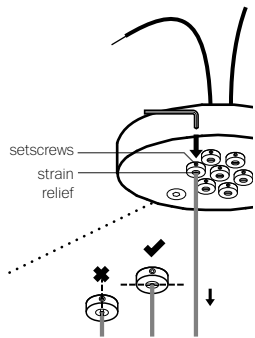

3


Thread the coaxial cables through the canopy, use a 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

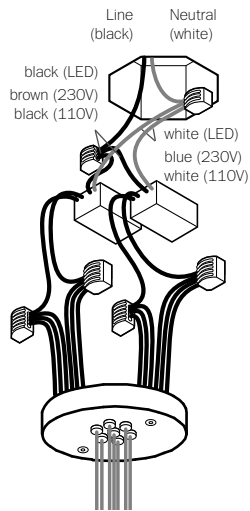

4


Xenon (110V) or LED: connect the black wire to black and white wire to white wire.

Xenon (230V): connect black wire to brown wire and white wire to blue wire.

Connect the coaxial cable to the open slots in the terminal block on the 12V side of the power supplies.

Ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Once all coaxial connections are made, lift the fixture into position and connect the line voltage to the open slot in the appropriate terminal block.

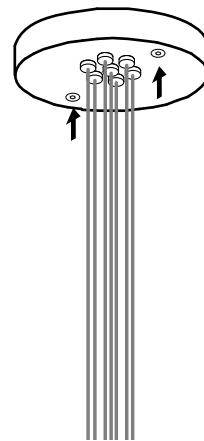


5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Tuck the power supply and wiring into the canopy. Line up the fastener holes or connect directly to structural ceiling surface using the fasteners provided.

Turn power to fixture on.

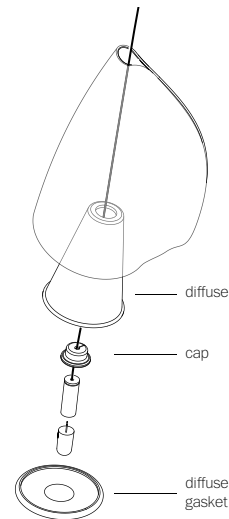

6

Bocci LED or xenon lamps are included. Lamping is power supply specific.

Plug the lamp into the socket. Do not touch the lamp with your bare hands. Ensure power to lamp is working correctly.

Thread the coaxial cable through the shade, followed by the borosilicate diffuser, the cap, and finally close off the diffuser with the diffuser gasket.



7

Clean fingerprints from surfaces.

For additional assistance, please contact Bocci:

Vancouver  
sales@bocci.com  
www.bocci.com

Berlin  
europe@bocci.com  
www.bocci.com

US patent # US D556,361

Worldwide patents issued and pending.

Made in Vancouver, Canada



CLUSTER

21.7

Design by Omer Arbel  
PRODUCT INSTALLATION INSTRUCTIONS

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

**BOCCI**