


adjustable  
up to 3000  
(10')  
standard

adjustable  
up to  
24600  
(80')  
custom  
max.

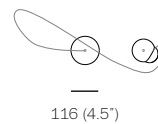

116 (4.5')

approx 2kg (4.5lb)

- PENDANTS: one
- MOUNTING: white canopy 116mm (4.5') in diameter x 40mm (1.6') deep
- LAMPING: grey and dark mirrored: 1.5w LED  
white opaline and light mirrored: 1.5w LED / 0.18w LED
- CABLE: adjustable. 3000mm (10') standard / up to 24600mm (80') maximum
- MATERIALS: blown and dipped glass, cast borosilicate glass cap, powder-coated steel and white hardware, braided metal coaxial cable, aircraft cable, electrical components.
- WEIGHT: approximately 2kg (4.5lb)
- POWER SUPPLIES: integral. Drivers included

#### DESCRIPTION

The deep canopy in this 57 variant refers to the canopy depth capable of accommodating the driver inside (standard outside of North America and Latin America). The deep canopy is 116mm (4.5') in diameter and 40mm (1.6') deep. It is designed for surface mounted applications that cannot make use of a junction box or ceiling cavity. The canopy is completely enclosed by a backplate, which houses the driver. This chandelier is designed to be horizontal, meaning that the pendant doesn't hang directly below, but instead trails off across a space, around a corner or simply deviates from its gravitational directive. As such, the pendant is designed to be hung from any number of optional swag points.

57 is an exploration of a technique used for producing closed cell foam. The process involves trapping voids of air of different sizes and configurations within a glass matrix, yielding a shape loosely referencing a rain cloud. These pockets of air remain invisible when the piece is off, but come alive to reveal an interior universe when the piece is illuminated. By virtue of the fabrication process, each piece is completely unique.

#### NOTES


+ Purchase replacement lamps online at [www.bocci.com/shop/bulbs](http://www.bocci.com/shop/bulbs)

US Patent # D796 732  
EU Patent # 002268581-0001 to 0006

Made in Vancouver, Canada

Vancouver  
sales@bocci.com  
www.bocci.com

Berlin  
europe@bocci.com  
www.bocci.com




DEEP CANOPY

57.1

Design by Omer Arbel  
PRODUCT SPECIFICATION

© 2020, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: [info@bocci.com](mailto:info@bocci.com)


**BOCCI**

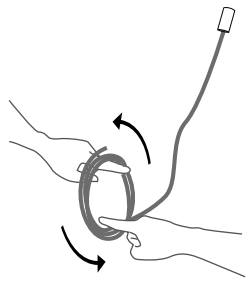

1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

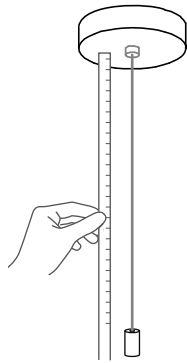

2

Determine the overall drop for the pendant fixture.

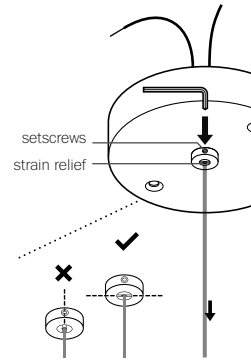

3


Thread the coaxial cable through the canopy, use a 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

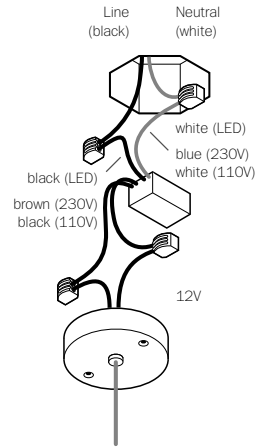


4

LED: connect the black wire to black and white wire to white wire.

Connect the coaxial cable to the open slots in the terminal block on the 12V side of the power supplies.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Once all coaxial connections are made, lift the fixture into position and connect the line voltage to the open slot in the appropriate terminal block.



5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Tuck the power supply and wiring into the canopy. Line up the fastener holes or connect directly to structural ceiling surface using the fasteners provided.

Turn power to fixture on.

GREY /  
DARK  
MIRRORED



WHITE  
OPALINE /  
LIGHT  
MIRRORED




6

For grey and dark mirrored, attach lamp to the coax socket.

For white opaline and light mirrored, slide the coax holder onto the coaxial cable.


Plug in lamps, with the circular LED array lamp facing towards the coax holder.

Ensure power to lamp is working correctly.

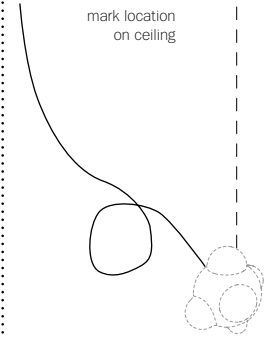

7

Mark the location for the swag hook screw on the ceiling.

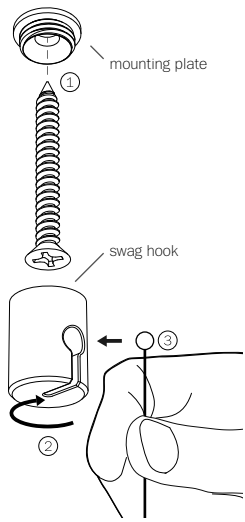


8

Ensure that the ceiling at the swag location is strong enough to hold 2kg (5lbs) before attaching swag hook with the provided screws.

Thread the swag hook on to the mounting plate, ensuring all the threads are engaged.


Slide the ball end of the aircraft into the slot on the swag hook.

Note: Some installations call for the use of a swag jack ring, which allows pendants to be swagged from the canopy.

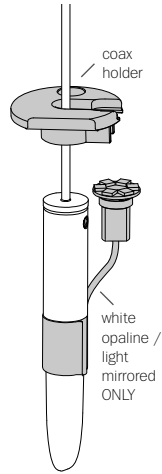

9


Slide the coax holder onto the coaxial cable.

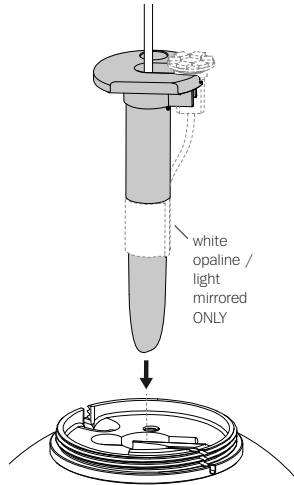

10

For white opaline/light mirrored, rest the circular LED array lamp on the coax holder.


Insert the lamp assembly into the glass pendant.

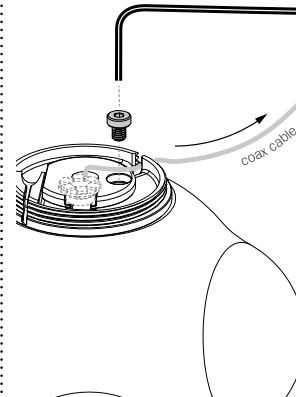

11

Attach the coax holder to the pendant holder and secure with set screw.

Slide the coax cable through the slot on the pendant holder

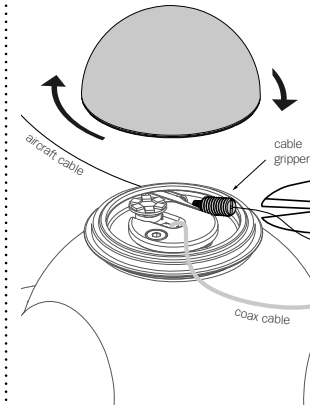


12

Feed the aircraft cable into the cable gripper. Slide the cable gripper into channel housing of the pendant holder. Pull the aircraft cable and slide the cable gripper to adjust the height.

Cut the aircraft cable using wire cutters.

Thread glass cap onto the pendant, ensuring that the coax remains seated in the slot.

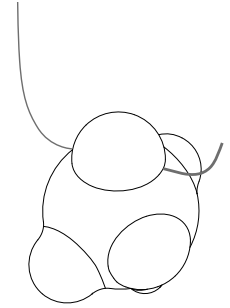

13

Clean fingerprints from surfaces.

For additional assistance, please contact Bocci:

Vancouver  
sales@bocci.com  
www.bocci.com

Berlin  
europe@bocci.com  
www.bocci.com

US Patent # D796 732  
EU Patent # 002268581-0001 to 0006

Made in Vancouver, Canada



DEEP CANOPY

57.1

Design by Omer Arbel  
PRODUCT INSTALLATION INSTRUCTIONS

© 2020, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

**BOCCI**