

adjustable  
up to 3000  
(10')  
standard

adjustable  
up to 30500  
(100')  
custom



±140 (5.5')

35 (1.4')

88 (3.5')

- PENDANTS: one
- MOUNTING: mini innie canopy (mud-in), 35mm (1.4") in diameter (exposed), 88mm (3.5") in diameter (overall) x 35mm (1.4")
- LAMPING: 0.4w LED
- COAX: adjustable, 3000mm (10') standard / up to 30500mm (100') maximum
- MATERIALS: blown glass, copper mesh, braided metal coaxial cable, electrical components, white polyurethane canopy
- WEIGHT: approximately 0.7kg (1.5lb)
- POWER SUPPLIES: remote mounted (fixture does not hook directly to a junction box). Drivers included

#### DESCRIPTION

The 'mi' designation in this 76 variant refers to the mini innie canopy. The mini innie canopy is 35mm (1.4") in diameter (exposed), 88mm (3.5") in diameter overall, and 35mm (1.4") deep, which is meant to be mudded into drywall. The pendant drop lengths on this light fixture are adjustable up to the specified maximum. Note: not adjustable after drywall is finished.

A vacuum is introduced to a strata composed of hot white and clear glass with copper mesh between. The vacuum causes the white layer to pull away through the embedded mesh, leaving numerous tendrils of white glass suspended within an interstitial space as it goes.

#### NOTES

- + Purchase replacement lamps online at [www.bocci.com/shop/bulbs](http://www.bocci.com/shop/bulbs)
- + Unless otherwise specified, a single class 2 driver will be sent for every 15 LED fixtures
- + Requires drivers to be remote mounted
- + Please note that the copper mesh used within the 76 may be affected by heat and oxidization during the glass blowing process. These small oxidized edges can sometimes separate within the pendant; this is a natural characteristic of the metal and is seen as an evolution of the piece as it ages.

US Patent # D817,524 S  
EU Design Patent # 002840975-0004-0007

Made in Vancouver, Canada

Vancouver  
sales@bocci.com  
www.bocci.com

Berlin  
europe@bocci.com  
www.bocci.com

approx 0.7kg (1.5lb)




MINI INNIE CANOPY

# 76.1mi

PRODUCT SPECIFICATION

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: [info@bocci.com](mailto:info@bocci.com)

# BOCCI

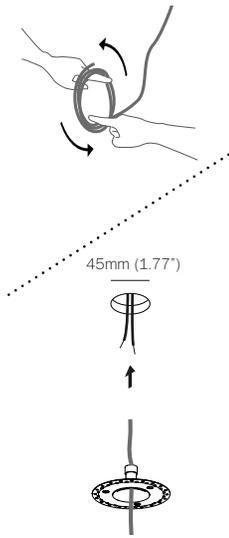

1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

Thread the coaxial cable through the canopy.

Drill a 45mm (1.7") diameter hole in ceiling material. Pull low voltage house wire through the hole.

Note: This low voltage wire will run to a remote mounted power supply.

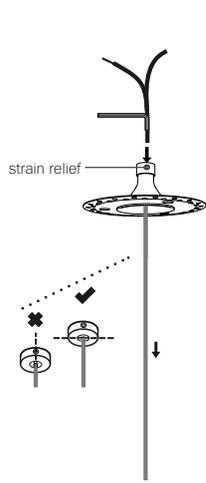

2


Determine the overall drop for the pendant fixture. Use the 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

**DO NOT OVERTIGHTEN.**

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

**RISK OF ELECTRIC SHORT!**

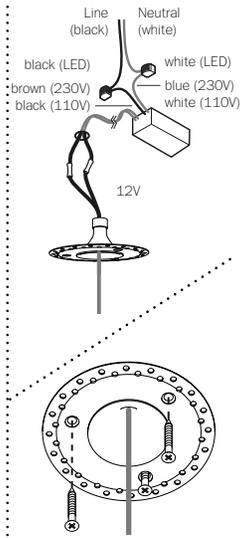

3

Connect the black wire to black and white wire to white wire.


Connect the house wires to the coaxial cable using #16 butt splices (stagger the splices). Use raw butt splices and heat shrink to simplify the installation.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Note: Insulated core is positive and braided exterior is negative.

Affix mini innie canopy to ceiling surface with fasteners provided.

Turn power to fixture on.

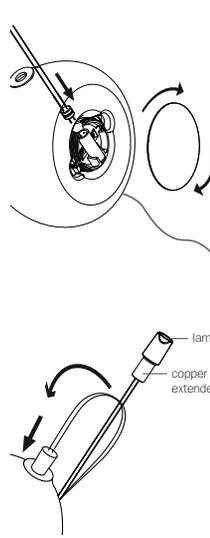

4

Remove the centre cap from 76 pendant. Install 76 pendant by sliding the lampholder at the end of the coaxial cable into the groove in the pendant hardware.

Bocci 0.4w LED lamps are included. Plug the lamp into flexible copper extender. Ensure power to lamp is working correctly.


Hold lamp wires away from the pendant to ensure they do not interfere with spinning cap.

Thread centre cap back on to pendant hardware.

**DO NOT OVERTIGHTEN.**

Bend the insulated wires and insert the lamp into the small hole in the pendant. Ensure that the lamp does not touch the inner glass bubble.


Note: when using a dimmer use only low voltage electronic dimmer

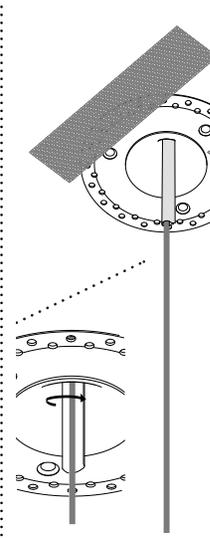

5

Tape the mounting plate edges with fiber mesh drywall tape.


Note: mask the coaxial cable off with painters tape to help with cleanup.

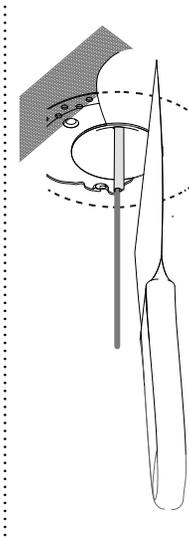

6

Use a drywall filler compound to "mud over" the assembly. Use the raised edge to mud up to to establish a sharp edge and to avoid getting mud in the indentation


Feather from the center of the mounting plate outwards using a large drywall trowel.

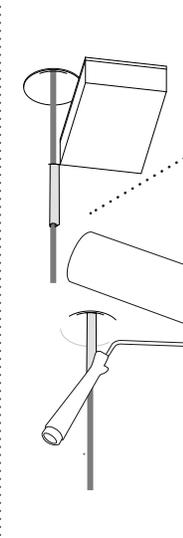

7

Using a foam sanding block, sand entire area until the rim and the edge of the operative component are exposed. For long term performance, it is essential that mud is sanded right down to the plastic rim.

Paint over entire assembly.

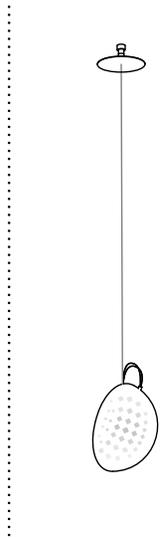

8

Remove masking tape and clean fingerprints from glass surfaces.

For additional assistance, please contact Bocci:

**Vancouver**  
sales@bocci.com  
www.bocci.com

**Berlin**  
europe@bocci.com  
www.bocci.com

US Patent Pending

EU Design Patent #  
002840975-0004-0007

Made in Vancouver, Canada



MINI INNIE CANOPY

76.1mi

PRODUCT INSTALLATION INSTRUCTIONS

© 2021, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

**BOCCI**